

Reece Safety Products Ltd

Unit B9, Lowfields Close, Lowfields Business Park, Elland, West Yorkshire HX5 9DX

Tel: 01422 310456 Fax: 01422 311070 Email sales@reecesafety.co.uk www.reecesafety.co.uk



Product Information and Assembly Instructions - Plastic Padlock Bodies & Key Covers PB & KH

A quick and simple way to colour code your Reece Safety S32 / M32 / L32 padlocks and keys.

To fit:

1) Open the shackle on the padlock the body is being fitted to.

2) Line up the left and right plastic body either side of the padlock as shown in Fig 1. **IMPORTANT:** the shackle opening end must line up with the grooves in the top of the plastic body - this allows the shackle to rotate

3) Push the two parts together around the padlock, clip together in one corner then work around clockwise clipping in each corner until all four are secure as shown in Fig 2

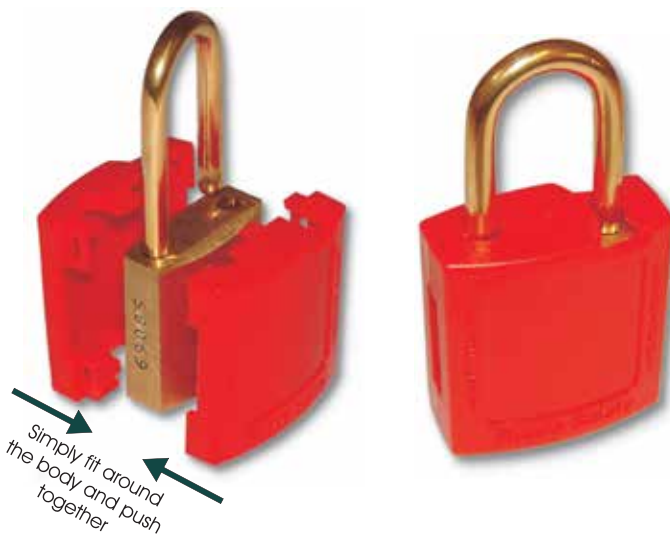


Fig 1

Fig 2

Once the body is fitted, it is designed to be a loose fit around the padlock body. If required, a small self adhesive pad can be fitted to either side of the padlock body before the plastic body is fitted to absorb any slight movement.

Plastic key covers.

Compliment the colour coded plastic bodies with these matching key covers. Simply slide over the key head as shown, then insert a key ring through the hole to secure.

